



Helping You Wear it Right



Adjust head cradle, as needed, to fit comfortably on your head. Place the respirator over your mouth and nose, then pull the head herness over the crown of the head.



Pull the ends of neck straps to adjust tightness. Neck strap tension may be decreased by pushing out on back side of buckles. Straps should feel secure but not over-tight.



2. Grasp the straps, place them at the back of the neck and hook them together.



Pull the ends of the head cradle straps to adjust tightness.



Head harness strap tension may be decreased by squeezing the buckle tabs on the harness. Straps should feel secure but not over-tight.

Perform a User Seal Check

(Can be Used with Particulate Filters or Cartridges)



Positive Pressure Seal Check: Cover the opening of the exhalation valve cover with your hand and exhale gently. If the facepiece bulges slightly and no air leaks are detected between your face and facepiece, a proper seal has been obtained.



Negative Pressure Seal Check: Lightly press the seal check button until you feel resistance. Hold the button in this position and inhale gently. If you feel the facepiece collapse slightly and pull closer to your face with no leaks between the face and facepiece, a proper seal has been obtained.



If faceseal air leakage is detected, reposition respirator on your face and/or readjust tension of the straps to eliminate air leakage. Repeat the user seal check until a proper seal is obtained.



AWARNING

AWARNING These respirators help protect against certain airborne contaminants. Before use, the wearer must read and understand the User Instructions provided as a part of the product packaging. A written respiratory protection program must be implemented meeting all the requirements of OSHA 1901341 including training, fit testing and medical evaluation. In Canada, CSA standards 294.4 requirements must be met and/or requirements of the applicable jurisdiction, as appropriate. Misuse may result in sickness or death. For correct use, see supervisor and User Instructions, or call 3M PSD Technical Service in USA at 1-800-243-4630 and in Canada at 1-800-267-4414.

Head Cradle Adjustments

Head cradle is designed for customization to hard hats and eyewear on different faces. Adjust head cradle to position blue eyewear on different races, request to be buckle higher or lower, as indicated below



Make the head cradle bigger by moving pin locks to a wider position. This should drop blue buckle lower to fall under . eyewear bar.



Make the head cradle smaller by moving pin locks to a narr position. This should pull up blue buckle higher to clear the evewear bar

Personal Safety Division 3M Center, Building 235-2W-70 St. Paul. MN 55144-1000

3M

Phone 1-800-328-1667 Web www.3M.com/reusable 3M PSD products are occupational use only.

3M is a trademark of 3M Company. Please recycle. Printed in U.S.A. © 3M 2013, 2018. All rights reserved. 70-0717-3943-0