

TeleShower - Model S5000ET

Instruction Manual for TeleShower S5000ET

© Abatement Technologies 1999 All Rights Reserved. No reproduction of any portion of this work is permitted without the express written permission of Abatement Technologies, Inc.

WARNING: Read and understand all Operating Instructions before using this product. Save this instruction manual for future reference.


This instruction manual provides important information on the use of the TeleShower S5000ET decontamination shower. **These instructions must be carefully followed in order to operate the unit safely and correctly.** If there are any questions regarding the use of this unit, please contact the distributor from whom you purchased the unit or call Abatement Technologies at 800-634-9091 U.S. or 905-871-4720 Canada immediately.

NOTE: The U.S. Environmental Protection Agency's publication "Guidance for Controlling Asbestos-Containing Materials in Buildings", EPA 560/5-85-024, includes helpful information on asbestos abatement. The most recent edition of this EPA publication should be read before performing any asbestos abatement work.

General Information

The TeleShower Model S5000ET is used for personnel decontamination after asbestos abatement work is performed. It is corrosion-resistant, lightweight and has a telescoping feature to enhance portability.

Key Components

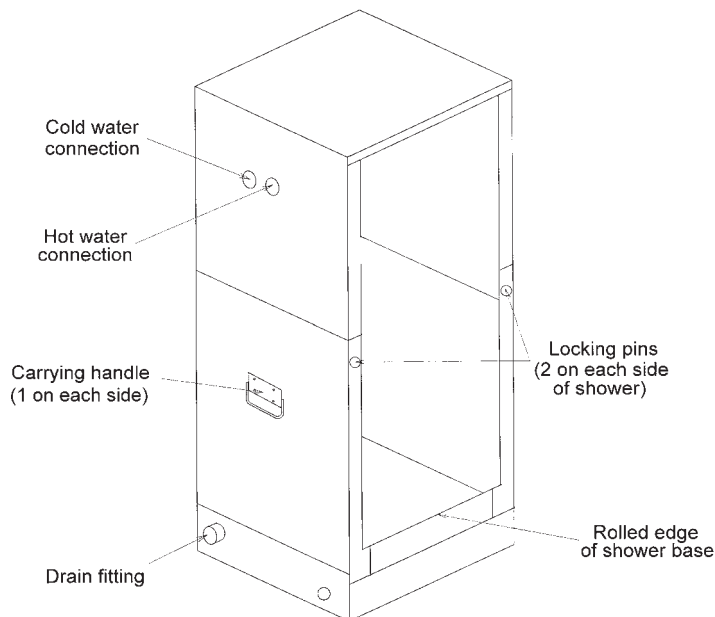

TeleShower Setup and Breakdown

Note: The TeleShower S5000ET is designed for indoor use only.

Note: The extending or collapsing of the shower unit requires two people.

Note: If the TeleShower is used in conjunction with a pump/filtration unit, be sure to carefully follow the operating instructions for the pump/filtration unit.

1. Extend the TeleShower as follows:
 - a) Place one foot on the rolled edge of the base at shower opening.
 - b) Push up on shower lid until the retractable pins have locked into place.
2.
 - a) Remove the plastic cap which covers the opening and pull up on the hinged shower floor.
 - b) Check to ensure that the 100 micron bag filter is in place under the shower drain.
 - c) Lower the hinged floor back into place against the shower base
3. Attach the metal hooks to the shower curtains and shower lid. Curtains should hang on the inside of the shower to prevent contaminated water from splashing outside the unit.
4. Connect hot and cold water sources to their respective fittings in top section of shower.
5. Using a garden-type water hose with standard fittings, connect the drain plug at base of shower to building drain system.
6. Collapse the TeleShower as follows:
 - a) Hold the top section of shower in place and pull pins to release them from their locked position.
 - b) Slide the top section of shower down into its base.

Filter Replacement

The TeleShower is equipped with a 100 micron filter bag. This filter removes contaminants which are 100 microns or larger in size from the water which drains into the shower base. As the filter becomes loaded with debris, the flow of water through the drain slows noticeably and the filter should be replaced as follows:

Note: Personnel responsible for changing the filter should wear the necessary personal protective equipment in accordance with federal, state, and employer requirements.

1. Turn water faucets "OFF."
2. If a pump/filtration unit is being used, turn it "OFF" and remove the water level sensor from the shower floor opening.
3. If a pump/filtration unit is not being used, remove the plastic cap which covers the opening in the shower floor for the water level sensor.
4. Pull up on the hinged shower floor, remove the S5110B filter bag from its channelled housing and dispose of the filter as asbestos waste.
5. Place a new S5110B filter into the channelled housing and lower the hinged floor back into place against the shower base.

TeleShower S5000ET Specification

Dimensions:	<ul style="list-style-type: none">•Extended: 33 3/8"L x 29 1/2"W x 82 7/8"H•Collapsed: 33 3/8"L x 29 1/2"W x 50 5/8"H
Weight:	<ul style="list-style-type: none">•78 lbs.
Material:	<ul style="list-style-type: none">•Corrosion-resistant marine alloy aluminum
Filtration:	<ul style="list-style-type: none">•100 micron filter bag
Miscellaneous:	<ul style="list-style-type: none">•2 carrying handles•20 mil PVC shower curtains•hot and cold water controls with fixed shower head•drain fitting for connection to pump/filtration unit or building drain•hinged floor to facilitate filter changeout

Limited Warranty

Abatement Technologies, Inc (ATI) warrants that goods sold to the original user shall be free from defects in material and workmanship for a period of 1 year, except such as are commercially acceptable. This warranty does not include useful filter life. **ATI does not warrant that the goods sold are merchantable or fit for any particular purpose. ATI makes no warranties other than as stated in this paragraph. All other warranties, guaranties, or representations, express or implied, by operation of law or otherwise, are expressly disclaimed.** Goods found by ATI to be defective or not to conform to specification shall upon return be replaced or repaired by ATI without any additional charges, or, at ATI's option, ATI may refund the purchase price of such goods. ATI will pay return transportation charges on returned goods not exceeding the transportation charges applicable to shipment from original destination unless the returned goods are free from defect and conform to specifications. Returned goods which are found by ATI to be free from defect and to conform to specifications shall be held for Purchaser's shipping instructions, which instructions Purchaser shall furnish promptly upon request. **ATI's liability shall in no event extend beyond replacement, repair or refund of the purchase price and ATI shall not be liable under any circumstances for special, contingent or consequential damages, nor for loss, damages, or expenses directly or indirectly arising from the use of the goods, including without limitation, warehousing, labor, handling and service charges, die, equipment, or machine breakage, nor for costs, lost profits or loss of good will. The use of substitute, non-ATI parts and/or filters, in any ATI product, voids all warranties and performance claims. The remedies set forth herein are exclusive.**

For warranty information and assistance contact Abatement Technologies' Customer Service Department at 800-634-9091 (U.S.) or 905-871-4720 (Canada.)

Ordering Information - TeleShower and Replacement Parts

<u>Part No.</u>	<u>Description</u>
S5000ET	TeleShower - Telescoping Portable Shower
S5110B	Replacement drain filter bag, 100 micron (25 each per case)
S5171	Replacement shower curtain (2 each per case)

Warning: Use only Abatement Technologies filters, and replacement parts. Substitute filters and parts void the warranty, jeopardize worker and environmental safety, and adversely affect engineered performance levels.