

## Table of Contents

Introduction
Product Quality
Safety
Features
Included
Specifications
Instrument Description
Display Description6
Measurement Considerations6
Operating Instructions
MAX Hold
Data Hold
Calibration Procedure
Battery Replacement
Accessories and Replacement Parts
Applications
Product Care
Product Warranty
Product Disposal and Recycling10
Product Support11

## Introduction

Thank you for purchasing your REED R8050 Sound Level Meter. Please read the following instructions carefully before using your instrument. By following the steps outlined in this manual your meter will provide years of reliable service.

#### **REED** Instruments

## **Product Quality**

This product has been manufactured in an ISO 9001 facility and has been calibrated during the manufacturing process to meet stated product specifications. If a certificate of calibration is required please contact the nearest authorized REED distributor or authorized Service Center. Please note an additional fee for this service will apply.

### Safety

Never attempt to repair or modify your instrument. Dismantling your product, other than for the purpose of replacing batteries, may cause damage that will not be covered under the manufacturer's warranty. Servicing should only be provided by an authorized service center.

#### Features

- High accuracy of ±1.4dB meets Type 2 standards
- Dual range measurement (High and Low)
- A & C frequency weighting
- Fast & Slow time weighting
- Easy-to-read backlit LCD display
- Data hold and Max hold functions
- Tripod mount for long-term monitoring
- Low battery indicator and auto shut off

#### Included


- Microphone Windshield Ball
- Battery
- Carrying Case

## **Specifications**

Measuring Ranges: 30 to 130dB Low: 30 to 100dB High: 60 to 130dB 70dB (In Each Range) Dynamic Range: Accuracy: ±1.4dB Resolution: 0.1dB 500mS Response Time: Frequency Range: 31.5Hz to 8kHz Frequency Weighting: A, C Fast/Slow (125ms and 1s) Time Weighting: Microphone: 0.5" (12.7mm) Electret Condenser Display: 4-Digit LCD Backlit Display: Yes Yes Data Hold: Max: Yes Alarm Indicators: Over (Visual On-Screen) Auto Shut-off: Yes (After 15 minutes) Tripod Mountable: Yes Low Battery Indicator: Yes Power Supply: 1 x 9V Battery Battery Life: Approximately 50 hours Product Certifications: CE, IEC 61672-1 Class 2, ANSI S1.4-1983 Operating Temperature: 32 to 104°F (0 to 40°C) Storage Temperature: 14 to 140°F (-10 to 60°C) Operating Humidity: 10 to 90% Dimensions: 8.3 x 2.2 x 1.3" (210 x 55 x 32mm) Weight: 8.1oz (230g)


#### **REED Instruments**

## **Instrument Description**

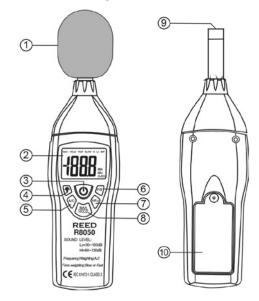

- 1. Windscreen
- 2. Display
- 3. Power Button
- 4. Backlight Button
- 5. Frequency Weighting Button
- 6. Time Weighting Button
- 7. Level Range Button 8.
  - MAX/HOLD Button
- 9. Microphone 10. Battery Cover

## **Display Description**

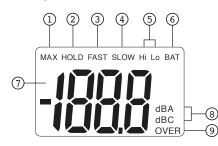

1. MAX Value Indicator

4.

- 2. Data Hold Indicator
- 3. Fast Weighting Indicator Slow Weighting Indicator
- 7. Measured dB Value 8. Frequency Weighting Indicator

6. Low Battery Indicator

- 5. Hi/Lo Range Indicator
- 9. Over Range Indicator

## **Measurement Considerations**

- Direct contact with strong winds or blowing air on the microphone may cause measurement errors. These effects can be reduced by using the included windscreen.
- Calibrate the instrument before operation if the instrument has not been in use for a long period of time or was last operated under extreme conditions.
- Do not store or operate the instrument in high temperature and high humidity environments.
- Keep microphone dry and avoid severe vibrations.
- When not in use, remove the battery and store the instrument in a low humidity environment.

#### **REED Instruments**

## **Operating Instructions**

- 1. Turn the meter on or off by pressing the Power Button.
- Press the Time Weighting Button to select the desired Response Time. If the sound source consists of short bursts, set the response to FAST (125ms). To measure average sound level, select SLOW (1s).
- 3. Press the Frequency Weighting Button to select the Frequency. Select "A" Weighting for a general noise sound level, or "C" Weighting for measuring high level noise. "C" Weighting is a standard weighting of the audible frequencies commonly used for the measurement of Peak Sound Pressure Level. If the "C" Weighted level is much higher than the "A" Weighted level, then there will be a large amount of low-frequency noise.
- 4. Press the Hi/Lo button to select the appropriate range. If the noise environment under test is between 30 to 100dB, use the 'Lo' range. If the noise environment under test is between 65 and 130dB, use the 'Hi' range. For a noise environment under test that is between 65 and 100dB, either range can be used. If the display flashes the "OVER" icon, press the range button to adjust the range.
- Hold the instrument comfortably in one hand (away from your body) or position it on a tripod for long-term monitoring. Point the microphone in the direction of the noise to take a measurement.

#### MAX Hold

Press the MAX/HOLD button to display the Maximum sound level values recorded during the measurement process. While in this mode, the meter will only refresh the reading when a higher measurement than the one currently displayed is detected. Press the MAX/HOLD button again to exit and resume normal operation.

#### Data Hold

To freeze a displayed reading during the measurement process, press and hold the MAX/HOLD button until both the MAX and HOLD icons appear on the display. To resume normal operation, press and hold the MAX/ HOLD button until the MAX and HOLD icons disappear.


REED Instruments

## **Calibration Procedure**

To calibrate the REED R8050, an external calibrator that can provide a 94.0dB signal at 1kHz (REED R8090) and a small screw-driver are required. Follow the steps below to calibrate the instrument.



- Open the battery compartment and locate the two calibration potentiometers behind the 9V battery (see diagram).
- 2. Turn the meter ON
- 3. Select 'C' weighting mode
- Select 'FAST' response mode
  Place the REED R8050 microphone into the calibrator. Set
- the calibrator to output 94dB6. Select the LOW range
- Adjust the 'C (Lo)' potentiometer for a display of 94.0dB
- 8. Select the HIGH range
- 9. Adjust the 'C (HI)' potentiometer for a display of 94.0dB
- 10. Set the calibrator to output 114dB and verify measurement

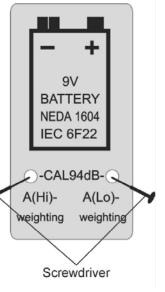

## **Battery Replacement**

When the "BAT" icon appears on the LCD, the battery should be replaced.

- 1. Remove the screw with a phillips screwdriver and open the battery cover.
- 2. Replace the 9V battery.
- 3. Place the battery cover back and tighten the screw.

## Accessories and Replacement Parts

- REED-WB Replacement Windshield Ball
- R8090 Sound Level Calibrator
- R1500 Tripod
- CA-05A Soft Carrying Case
- R8888 Deluxe Hard Carrying Case

Don't see your part listed here? For a complete list of all accessories and replacement parts visit your product page on www.reedinstruments.com.

## Applications

- Preventative Maintenance
- Industrial Machinery/Equipment
- Construction Sites
- Ensuring Safe Working Conditions
- Public Venues / Concerts
- Code Enforcement
- Traffic
- Appliance Noise Testing

REED Instruments

## **Product Care**

To keep your instrument in good working order we recommend the following:

- Store your product in a clean, dry place.
- Change the battery as needed.
- If your instrument isn't being used for a period of one month or longer please remove the battery.
- Clean your product and accessories with biodegradable cleaner. Do not spray the cleaner directly on the instrument. Use on external parts only.

## **Product Warranty**

REED Instruments guarantees this instrument to be free of defects in material or workmanship for a period of one (1) year from date of shipment. During the warranty period, REED Instruments will repair or replace, at no charge, products or parts of a product that proves to be defective because of improper material or workmanship, under normal use and maintenance. REED Instruments total liability is limited to repair or replacement of the product. REED Instruments shall not be liable for damages to goods, property, or persons due to improper use or through attempts to utilize the instrument under conditions which exceed the designed capabilities. In order to begin the warranty service process, please contact us by phone at 1-877-849-2127 or by email at info@reedinstruments.com to discuss the claim and determine the appropriate steps to process the warranty.

## **Product Disposal and Recycling**



Please follow local laws and regulations when disposing or recycling your instrument. Your product contains electronic components and must be disposed of separately from standard waste products.

#### **REED** Instruments

## **Product Support**

If you have any questions on your product, please contact your authorized REED distributor or REED Instruments Customer Service by phone at 1-877-849-2127 or by email at info@reedinstruments.com.

Please visit www.REEDInstruments.com for the most up-to-date manuals, datasheets, product guides and software.

Product specifications subject to change without notice. All rights reserved. Any unauthorized copying or reproduction of this manual is strictly prohibited without prior written permission from REED Instruments.

# REED INSTRUMENTS TEST & MEASURE WITH CONFIDENCE



## **CHECK OUT OUR LATEST PRODUCTS!**